



**cometal**  
MÉCANIQUE ARCHITECTURE

cometal inc. 420 rue Dumais, Lévis, QC, G6W 6P2 – 418 839-8831

**BRANCHES:**

<b>Cometal SL</b>	2415 de la Métallurgie, C.P. 66, Jonquière, QC, G7X 7V8	418 547-3322
<b>Cometal BSL</b>	38, St-Germain-Est, Suite 200, Rimouski, QC, G5L 1A2	418 722-0992
<b>Cometal MTL</b>	2850 St-Martin-Est, Suite 101, Laval, QC, H7E 5A1	450 664-0323
<b>Cometal STD</b>	672 Lemire, Suite A, Drummondville, QC, J2C 7W9	819 472-3838

## **- MAINTENANCE SHEET - COMÉTAL ALUMINUM FOOT GRILLES**

Once the grille is installed according to manufacturer specifications and recommendations, the following maintenance instructions must be respected.

1. Clean the grille and retaining pan regularly: every 4 weeks in winter and every 8 to 12 weeks in summer, or as needed depending on foot traffic.
2. Check that the leveling plates or angles are still in place and properly secured, to adequately reinforce the supports and panels.
3. Regularly lubricate the panel hinges and locks with a standard aerosol grease, every 4 weeks in winter and every 8 to 12 weeks in summer, or as needed depending on foot traffic.
4. To lift the panel, do not insert tools between the blades (ex: a screwdriver). Use the lifting hook provided for this purpose.

Note: Improper maintenance of the foot grille will void the manufacturer's warranty.